

OM 330A, 330C, MH 114, CB 485

(Pictures taken in OM 330C)

View from the back of the room:

- Manual screen
- Overhead
- Instructor's Station



View of the instructor's station:

- Media Control Panel
- VCR
- Accessory drawer
- Computer, with DVD drive



Inside the accessory drawer:

- Cables: VGA (black), Ethernet (grey).
- Slide projector remote (MH 114 and CB 485 can have slide projectors upon request.)
- VCR remote

Getting to Know the Media Control Panel and the Media Interface Panel

Turn projector ON/OFF

Source select



Media Interface Panel, located on the side of the Instructor's station:

- Auxiliary Video connection, Video Audio, L/R
- Ethernet
- Modem
- S-Video



Laptop Computer Connection:

- Computer audio.
- VGA connection

To project from computer:

- Turn projector ON
- Select Computer on the Media Control Panel



To project from a laptop computer:

- Use the VGA cable located in the accessory drawer to connect your laptop to the Media Interface Panel.



- Turn projector ON
- Select Laptop on the Media Control Panel.




To play a VHS tape:

- Insert VHS tape gently into VCR
- Select VCR on the Media Control Panel
- Control VCR using Media Control Panel. There is also a remote control available for VCR.



To use an external video source:

- For auxiliary video (i.e. digital or VHS camcorder via RCA cables) use Auxiliary Video Input on the Media Interface Panel.
- Then select Auxiliary Video on Media Control Panel
- For S-Video connection, (i.e. DVD player or document camera,) use S-Video input on the Media Interface Panel
- Then Select S-Video on Media Control Panel

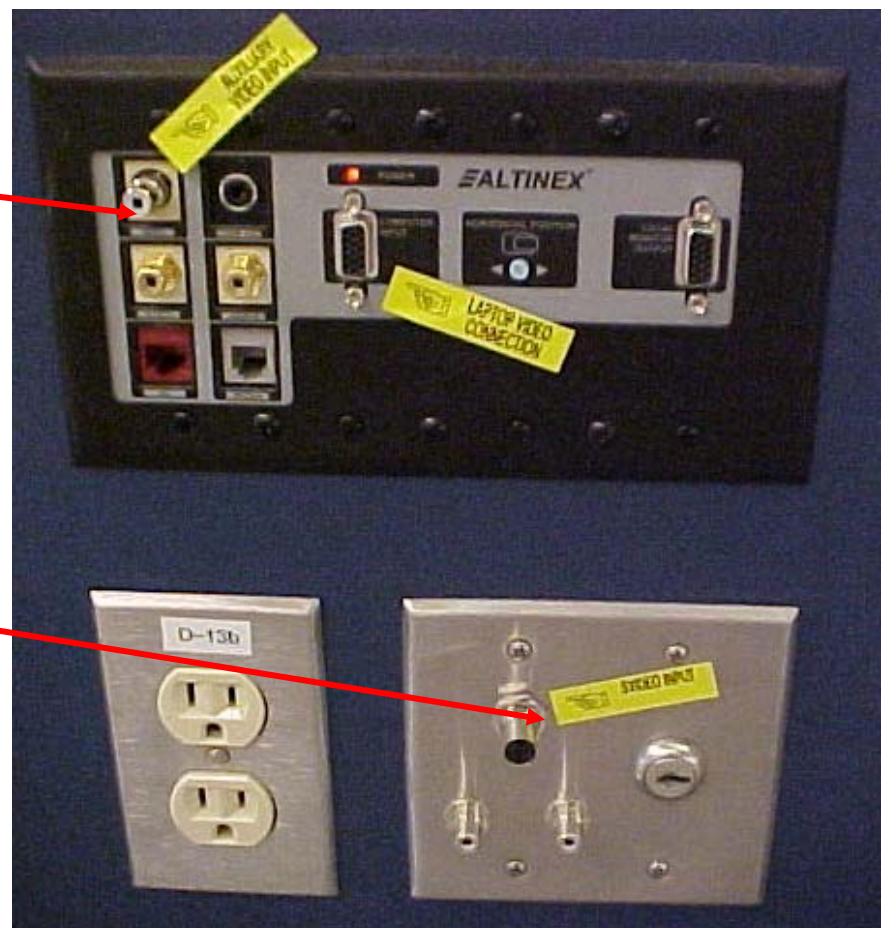

To use the Slide Projector;

- Push both focus buttons to turn POWER on



Forward,
reverse
buttons